



All Glass Rooflight Fitting Guide


External Doors Online

Tel : 01484 613104 Email : sales@externaldoorsonline.co.uk


1. Measure length and width of opening size required

.....Use these sizes to order rooflight)


2. Build stepped upstand around the edge of the opening to the dimensions on the diagram below

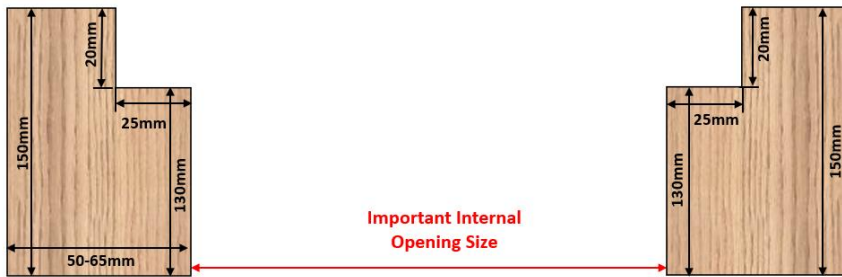

3. Apply weathering on top and down the side of the upstand (see diagram below)

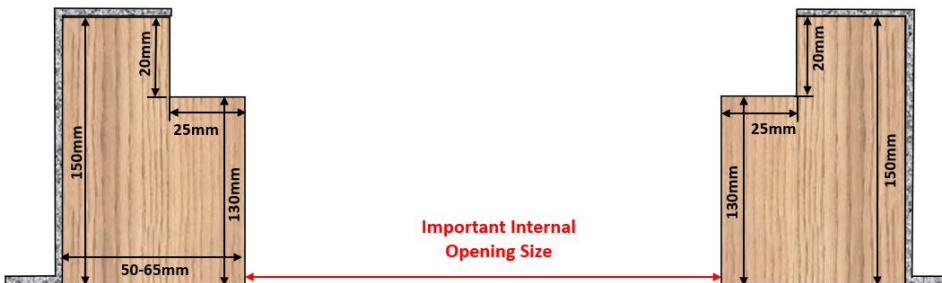

4. Apply a bed of sealant where indicated on diagram below

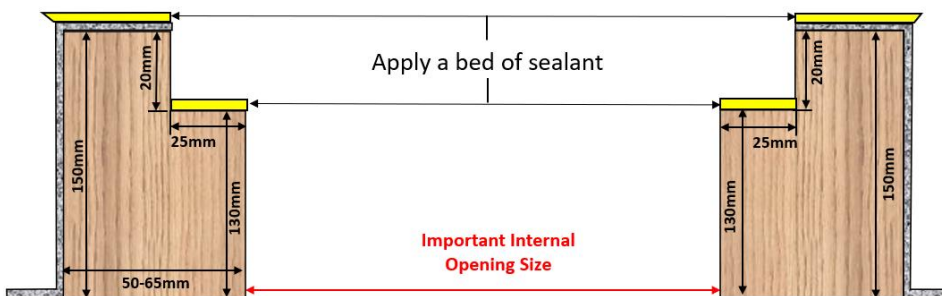

5. Secure rooflight on top of the beds of sealant.

